

WIRING DIAGRAM SRS NEXUS

ERR. CODE	LED				DESC.
	1	2	3	4	
E01	□	□	■	■	INTERLOCK MAGNET SHORT
E02	□	□	■	■	INTERLOCK MAGNET OPEN
E03	□	□	■	■	LED REGISTER DON'T MATCH DEFINITION
E04	□	■	□	□	OPTO ERROR
E05	□	■	■	■	EXPANDER REG. NOT MATCH DEFINITION
E06	□	■	■	■	VERT BTN SHORT
E07	□	■	■	■	LONG. LOCK OPEN

KEY	
□	LED OFF
■	LED ON
□	BLINK ONCE
■	BLINK TWICE

09376 REV. A

P/N 09376

