

# Helianthus *SERIES*

*Technical manual*



Helianthus

Helianthus *C*

Helianthus *DBT*



METALTRONICA

# **MTHLIDMD\_U04**

(Rev. 04\_20230109)

## **Manufacturer's web site**

[www.metaltronica.com](http://www.metaltronica.com)



Metaltronica S.p.A.  
Registered office and op. HQ:  
Via delle Monachelle 66  
00071, Pomezia (Rome),  
Italy  
Warehouse and Production:  
Via delle Monachelle 70  
00071, Pomezia (Rome),  
Italy

© 2023 Metaltronica  
All rights are reserved. Reproduction  
or transmission in whole or in part, in  
any form or by any means, electronic,  
mechanical or otherwise, is  
prohibited without the prior written  
consent of the copyright owner.

Printed in Italy

## **Customer technical service**

[Technical.assistance@metaltronica.com](mailto:Technical.assistance@metaltronica.com)  
[satme@metaltronica.com](mailto:satme@metaltronica.com)

## **Spare parts**

[Spare.parts@metaltronica.com](mailto:Spare.parts@metaltronica.com)

## **Technical manual Conventions**

*Text font*            *Arial*

*Font Dimension*    *12 pt. for text*

*>12 pt. for Chapter or Paragraph*



*DOCUMENT STATUS SHEET*

Title of Document:

**HELIANTHUS series TECHNICAL MANUAL (MTHELIDMD-U04)**

<i>Version</i>	<i>Release</i>	<i>Date (dd/mm/yy)</i>	<i>Reason of change</i>
ENGLISH	00	28/02/2019	First release
ENGLISH	01	20/02/2020	Additional info (from EMC/Safety reports)
ENGLISH	02	07/07/2020	Minor changes
ENGLISH	03	20/04/2021	Compliance to New European Regulation 2017/745 (MDR)
ENGLISH	03.1	15/11/2021	New information added for compliance to New European Regulation 2017/745 (MDR)
ENGLISH	03.2	15/03/2022	New information added for compliance to New European Regulation 2017/745 (MDR)
ENGLISH	04	09/01/2023	Minor changes. Chapter 3 updated (§2.3 – Calculator connection)

# Contents

## ***I UNIT DESCRIPTION***

CHAPTER I: .....	I - 1
INTRODUCTION TO TECHNICAL MANUAL .....	I - 3
INTENDED USE .....	I - 3
SCOPE AND INDICATIONS .....	I - 3
QUALITY CONTROLS .....	I - 5
TRAINING .....	I - 5
COMPLIANCE STATEMENT .....	I - 5
SAFETY SYMBOLS .....	I - 7
OTHER SYMBOLS .....	I - 7
INTERNATIONAL SYMBOLS .....	I - 8
ACRONYMS .....	I - 12
DECLARATION ACCORDING TO IEC 60601-1 STANDARD .....	I - 15
SYSTEM CONFIGURATION .....	I - 16
SAFETY INFORMATION .....	I - 17
ELECTROMAGNETIC INFORMATIONS ACCORDING TO IEC 60601-1-2.....	I - 20
WEEE INFORMATIONS ACCORDING TO DIRECTIVE 2012/19/EU AND 2002/96/EC .....	I - 25
TECHNICAL SPECIFICATIONS* .....	I - 26
DEVICE CLASSIFICATION .....	I - 46

## ***II TRANSPORT, UNPACKAGING, POSITIONING***

CHAPTER II: .....	II - 1
1 – HELIANTHUS SERIES DIMENSIONS AND WEIGHT .....	II - 3
ACQUISITION WORK STATION (AWS) DIMENSIONS AND WEIGHT .....	II - 6
ANTI-X BARRIER DIMENSIONAL DRAWINGS.....	II - 7
2 – RECEIVE SHIPMENT AND UNPACK .....	II - 8
REQUIRED TOOLS FOR UNPACKING AND ASSEMBLE MAMMOGRAPH .....	II - 8
3 – UNPACKING CHECK LIST FOR MAMMOGRAPHY UNIT .....	II - 9
3.1 – PACKING EXTERNAL CONDITIONS/DAMAGE CHECK.....	II - 11
3.2 – DETECTOR SHIPPING CONDITIONS.....	II - 12
3.3 - DETECTOR STORAGE CONDITIONS (WHILE PACKED) .....	II - 12
3.4 – MAMMO UNIT / ACQUISITION WORK STATION UNPACKING .....	II - 13
CRATE PACKING/UNPACKING .....	II - 13
STAND POSITION PACKING/UNPACKING .....	II - 20
AWS UNPACKING.....	II - 21
MAMMO UNIT & ANTI-X BARRIER UNPACKING .....	II - 27
PREINSTALLATION PRECAUTIONS .....	II - 35
3.5 – ROOM PLANNING: CHECK OF INSTALLATION AREA .....	II - 36
3.6 - ROOM PLANNING: ENVIRONMENT CONDITIONS.....	II - 41

3.7- BOLTING THE STAND TO THE FLOOR .....	II – 42
3.8 - DETECTOR UNPACKING .....	II – 43
3.8.1 GENERAL INFORMATION .....	II – 43
3.8.2 TEMPERATURE SENSOR .....	II – 44
3.8.3 SHIPPING CONTAINER .....	II – 45
3.8.4 UNPACKING PROCEDURES.....	II – 48
3.8.5 PRE-INSTALLATION STORAGE .....	II – 53
4 - DETECTOR PACKING INSTRUCTIONS .....	II – 54
4.1 GENERAL INFORMATION .....	II – 54
4.2 DETECTOR PACKING PREPARATION .....	II – 55
4.3 DATALOGGER CHECKING.....	II – 56
4.4 EXTERNAL CRATE PACKING.....	II – 58
5 - DETECTOR DELIVERY .....	II – 60

### **III INSTALLATION**

CHAPTER III: .....	III -1
1. INSIDE VIEW MAIN INTERNAL COMPONENTS LOCATION.....	III -3
1.1 INTERNAL MAIN COMPONENTS .....	III -3
1.2 C-ARM COMPONENTS.....	III -13
1.3 ACQUISITION WORK STATION COMPONENTS .....	III -15
1.4 MAMMO UNIT/ACQUISITION WORKSTATION CONNECTION .....	III -17
2. MAMMO UNIT CONNECTIONS.....	III -18
2.1 MAMMO UNIT CONNECTION TO WALL OUTLET.....	III -18
2.2 CABLE CONNECTIONS .....	III -18
2.3 PC CONNECTIONS.....	III -20
2.4 REAR CONNECTIONS.....	III -22
2.5 BACKSIDE EXTERNAL CONNECTIONS .....	III -23
3. INSTALLATION CHECK LIST FOR MAMMOGRAPHY UNIT.....	III -24
3.1 EXTERNAL DAMAGE CHECK .....	III -25
3.2 INTERNAL VISUAL CHECK .....	III -25
3.3 LINE VOLTAGE CONFIGURATION.....	III -25
3.4 POWER LINE CONNECTION.....	III -28
3.5 LINE RESISTANCE .....	III -29
3.6 PROTECTIVE MEASURES .....	III -29
3.7 H.V. GENERATOR TANK VENT VALVE OPENING .....	III -32
3.8 FOOT CONTROLS CONNECTION.....	III -33
3.9 DOOR SAFETY SWITCH CONNECTION.....	III -35
3.10 EXTERNAL LAMP CONNECTION.....	III -36

## **IV SETTING TO WORK MECHANICAL AND ELECTRICAL SETTING**

CHAPTER IV:	IV - 1
1. MECHANICAL AND ELECTRICAL SETTING CHECK LIST	IV - 3
1.1 ELECTRICAL CONNECTION OF LATERAL COVER	IV - 4
1.2 C-ARM COVER IDENTIFICATION	IV - 5
1.3 SYSTEM AND DETECTOR ASSEMBLY	IV - 7
1.4 ACQUISITION WORK STATION ASSEMBLY	IV - 11
1.5 MONITOR AND KEYBOARD ASSEMBLING	IV - 11
2.2 EMERGENCY CUT OFF	IV - 16
1.7 SWITCH ON UNIT	IV - 18
1.8 START APPLICATION SOFTWARE	IV - 20
1.9 MECHANICAL SAFETY DEVICE INTEGRITY AND FUNCTIONAL CHECK	IV - 26
1.10 C-ARM VERTICAL MOVEMENT	IV - 27
1.11 C-ARM ROTATION MOVEMENT	IV - 27
1.12 C-ARM STEREO ROTATION $\pm 15^\circ$ WITH STEREOTACTIC BIOPSY DEVICE	IV - 28
1.13 COMPRESSION MOVEMENT	IV - 28
1.14 BREAST THICKNESS CHECK	IV - 29
1.15 COMPRESSION FORCE CHECK	IV - 29
1.16 C-ARM MOVEMENT WITH COMPRESSION	IV - 30
1.17 X-RAY BEAM COLLIMATION CHECK	IV - 31
1.18 LIGHT BEAM COLLIMATION CHECK	IV - 31
1.19 COLUMN COVERS ASSEMBLING	IV - 31
1.20 UNIT CLEANING	IV - 32

## **V SETTING TO WORK AND DETECTOR CALIBRATION**

CHAPTER V:	V - 1
CONFIGURATION CHECK LIST	V - 3
1.1 SWITCHING ON	V - 4
1.2 MAMMO UNIT CONFIGURATION	V - 4
1.2.1 ACQUISITION WORKSTATION CONFIGURATION	V - 4
1.2.2 PACS/MINIPACS CONFIGURATION (WITH REVIEW STATION)	V - 8
1.2.3 STANDALONE CONFIGURATION	V - 18
1.3 SERVICE FUNCTION	V - 19
1.3.1 PACKAGE	V - 21
1.4 CALIBRATION FUNCTIONS	V - 21
1.4.1 POSITION CALIBRATION	V - 22
1.4.2 COMPRESSION FORCE CALIBRATION	V - 25
1.4.3 MAIN VOLTAGE CALIBRATION (HV)	V - 28
1.4.4 INCLINOMETER CALIBRATION AND ZERO TUBE SETTING	V - 29
1.4.5 LENZE POTENTIOMETER CALIBRATION	V - 30
1.4.6 FILTER CALIBRATION	V - 32

1.4.7	LOW SPEED STARTER DIAGNOSTIC CALIBRATION.....	V - 33
2.1	ANODE/FILTER SELECTION .....	V - 36
2.2	DETECTOR CALIBRATION.....	V - 39
2.2.1	DETECTOR REPLACEMENT .....	V - 41
2.2.2	DEFECT CALIBRATION (ONLY FOR A-SE DETECTOR).....	V - 42
2.2.3	SHADING CALIBRATION .....	V - 53
2.2.4	AEC CALIBRATION.....	V - 64
2.3	ENHANCE TUNING.....	V - 73
2.4	REJECTED ANALYSIS .....	V - 76
2.5	UTILS.....	V - 78
2.6	SHOT.....	V - 79
2.7	DEFMAP.....	V - 82
2.8	NOISE.....	V - 84
2.9	OFFSET .....	V - 86
2.10	ADD DEFECT.....	V - 87
2.11	REMOVE DEFECT .....	V - 88
3	TOOLS.....	V - 90
3.1	TILT MOTOR TOOL .....	V - 91
3.2	LENZE DRIVER TOOL .....	V - 92
3.3	INVERTER TOOL.....	V - 93

## ***VI PERIODICAL MAINTENANCE***

CHAPTER VI:	.....	VI - 1
1 – PERIODICAL INSPECTIONS.....	.....	VI - 3
2 – PERIODICAL REPLACEMENT .....	.....	VI - 28
3 – AIR KERMA CALIBRATION.....	.....	VI - 31
4 - LIST OF TRANSFORMERS .....	.....	VI - 33
5 - LIST OF FUSES .....	.....	VI - 34

## ***VII SCHEMATIC DRAWINGS AND COMMUNICATION DIAGRAM***

CHAPTER VII:	.....	VII - 1
CB0384 – AC/DC POWER SUPPLY DIAGRAM – HM “C” .....	.....	VII - 3
CB0385 – SERIAL AND CAN BUS LINES CONNECTIONS DIAGRAM – HM “C” .....	.....	VII - 4
CB0386 – REAL TIME DIAGRAM – HM “C” .....	.....	VII - 5
CB0391 – AC/DC POWER SUPPLY DIAGRAM – HM “C-BRAKES” .....	.....	VII - 6
CB0392 – SERIAL AND CAN BUS LINES CONNECTIONS DIAGRAM – HM “C-BRAKES” .....	.....	VII - 7
CB0393 – REAL TIME DIAGRAM – HM “C-BRAKES” .....	.....	VII - 8
CB0388 – AC/DC POWER SUPPLY DIAGRAM – HM.....	.....	VII - 9
CB0389 – SERIAL AND CAN BUS LINES CONNECTIONS DIAGRAM – HM .....	.....	VII - 10
CB0390 – REAL TIME DIAGRAM – HM .....	.....	VII - 11
CB0387 – PE DIAGRAM HM .....	.....	VII - 12

CB0394 – SAFETY DIAGRAM - HM .....	VII - 13
CB0395 – COMPUTER AND LAN/VIDEO DIAGRAM – HM (AWS).....	VII - 14
CB0396 – COMPUTER AND LAN/VIDEO DIAGRAM – HM (CONSOLE).....	VII - 15
CB0367: DISTRIBUTION BACK PANEL (24Vdc) .....	VII - 16
CB0364: VOLTAGE DISTRIBUTION PANEL (PNE CONFIGURATION) .....	VII - 17
CB0280: CABLAGGIO PULSANTE RAGGI MAMMOGRAFO.....	VII - 18
CB0379: CAVO GRUPPO SOLENOIDE-USWITCH PER FRENO EMERGENZA PEND.NE .....	VII - 19
CB0371: MAMMO UNIT-AWS CONNECTIONS .....	VII - 20
CB0370: CABLAGGIO PANNELLO DISTRIBUZIONE 24V– AWS (HM).....	VII – 21
CB0321: CABLAGGIO PEDALE RAGGI AWS 4U .....	VII – 22
CB0322: CABLAGGIO POTTER PMD2/2D .....	VII – 23
CB0323: CABLAGGIO POTTER PMD2/3D .....	VII – 24
CB0324: CABLAGGIO INGRANDITORE .....	VII – 25
CB0325: CABLAGGIO SBD .....	VII – 26
CB0326: CABLAGGIO SBD .....	VII – 27

## VIII PCBs LAYOUT AND CONFIGURATION

CHAPTER VIII:.....	VIII - 1
PCBs WITH FACTORY SETTINGS .....	VIII - 3
PCB/05-190-X (X-RAY TUBE SUPPLY BOARD).....	VIII - 10
PCB/16-269-X (COMPRESSION SYSTEM CONTROLLER) .....	VIII - 15
PCB/14-240-X (PWR SEQUENCER SUPPLY BOARD).....	VIII - 17
PCB/14-244-X (POTTER / MAGNIFIER CONTROLLER).....	VIII - 24
PCB/14-246-X.....	VIII - 25
PCB/14-249-X (AUTOMATIC COLLIMATOR, MIRROR AND FILTER CONTROLLER).....	VIII - 26

## IX FAULT FINDING- TROUBLESHOOTING

CHAPTER IX:.....	IX - 1
1. ERROR MESSAGES AND TROUBLESHOOTING .....	IX - 3
2. REPLACEMENT .....	IX - 19
2.1. UPS INTERNAL BATTERY REPLACEMENT .....	IX - 19
3. DRIVER LENZE REPLACEMENT.....	IX - 22
3.1. DISASSEMBLY .....	IX - 22
3.2. SET UP .....	IX - 26
3.3 STATUS AND ERRORS HANDLING .....	IX - 28
4. PC BACKUP AND RESTORE .....	IX - 31
4.1. BACK UP .....	IX - 31
4.2. RESTORE.....	IX - 32