

Troubleshooting Guide

E28 PREP ERROR

Prep Signal active longer than 20 seconds.

Possible causes:

Defective exposure switch not closing at exposure request.

Check hand-switch, foot-switch, or key panel.