



✓ Check it First

**MANUAL NUMBERS
MATTER**



✓ **PAY ATTENTION TO
THE NUMBERS!**

Hey there Subscriber,

Not All SHF/SHFR Generators Are the Same

When working with Sedecal SHF and SHFR generators, make sure you're using the **correct documentation for the specific system you're servicing.**

Sedecal manuals follow a 3-part naming convention:

PREFIX – NUMBER – REVISION

For example: IN-1108R14

- **IN** = Installation manual
- **1108** = Configuration-specific number
- **R14** = Manual revision

Common Manual Prefixes

- | | |
|------------------------------------|--------------------------------|
| • IN - Installation | • RP - Renewable Parts |
| • DB - Databook | • CL - Central Listing |
| • CF - Configuration | • SM - Service Manual |
| • CA - Calibration | • PI - Pre-installation |
| • CC - Config & Calibration | • OM - Operators Manual |
| • TR - Troubleshooting | • AP - Appendix |
| • MA - Maintenance | • SN - Service Note |
| • SC - Schematics | • SP - Startup Primer |

The configuration number isn't necessarily the same across every manual, even for the **same generator**. Don't assume a manual number applies to every SHF/SHFR generator, or even every manual for the same generator.

So, Which Manual Should You Use?

Start with the build report.

Use the generator's **serial number** to locate the applicable build report, then verify the **manual type, number, and revision** before troubleshooting, servicing, or ordering parts.

If you're unsure which documentation applies, **Summit can look it up using the equipment serial number.**



Have More Questions?

Browse our authorized dealer portal website. This site contains documentation to assist with installation, maintenance, and troubleshooting of Summit supported X-ray equipment.

SUMMITXRAY.COM →

LOCATE US

SUMMIT INDUSTRIES
7555 N CALDWELL AVE
NILES, ILLINOIS 60714

CONTACT US

tscalls@summitindustries.net
customerservice@summitindustries.net
[\(773\)588-2444](tel:(773)588-2444) or [\(773\)353-4000](tel:(773)353-4000)

